


# **DATA SHEET**

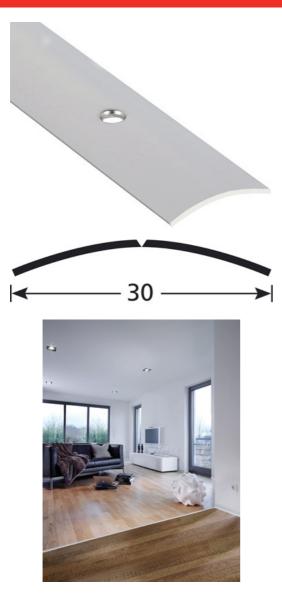

# > MAINTENANCE

For daily cleaning, use standard detergents. In case you want to use a sodium, ammoniac or acid based cleaner, carry first out a preliminary test.

# DESCRIPTION

Drilled stainless steel profile to make a transition between 2 floor coverings of the same level To be screwed - central holes 5 holes, first one at 65 mm.

#### USE

For overlapping a floor covering or a parquet or concrete floor. Indoor use

# REFERENCE

Ref : 1002

### MATERIAL

**REACH** compliant

# **FITTING MODE**

Cut the profile to the desired length. Locate the holes and drill in the subfloor. Place the ROMUS plugs 94154. Position the profile and fasten with screws VVVV.

The information contained in this document is provided for information purposes. Romus cannot be held liable for this information. The user or specifier will check the compatibility of the product technical data with the actual situation. Romus reserves the right to modify all or part of this document without prior notice.		
Architect :		
Project :		
Email :		
Tel :		
Distributor :	Tel :	Email :