

## DATA SHEET



### DESCRIPTION

Drilled aluminium profile  
to make a transition between 2 floor coverings of different levels  
Drilled - countersunk: to be screwed  
14 holes, first and last one at 83 mm  
Holes are drilled, countersunk and deburred

### USE

For edging and finishing a floor covering  
Indoor use

### REFERENCE


Ref : 1920

### MATERIAL

REACH compliant

### FITTING MODE

Cut the profile to the desired length. Locate the holes and drill in the subfloor. Place the ROMUS plugs 94154. Position the profile and fasten with screws VVVV.

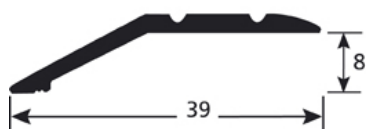

The information contained in this document is provided for information purposes. Romus cannot be held liable for this information. The user or specifier will check the compatibility of the product technical data with the actual situation. Romus reserves the right to modify all or part of this document without prior notice.

Architect :

Project :

Email :

Tel :

Distributor :

Tel :

Email :

## DATA SHEET

### > MAINTENANCE

For daily cleaning, use standard detergents. In case you want to use a sodium, ammoniac or acid based cleaner, carry first out a preliminary test.

The information contained in this document is provided for information purposes. Romus cannot be held liable for this information. The user or specifier will check the compatibility of the product technical data with the actual situation. Romus reserves the right to modify all or part of this document without prior notice.

Architect :

Project :

Email :

Tel :

Distributor :

Tel :

Email :