
- **► COVERSTRIPS EXPANSION PROFILES**
- > "PPS" PROFILES
- «PPS» EDGE PROFILE REF. 1294

# **DATA SHEET**

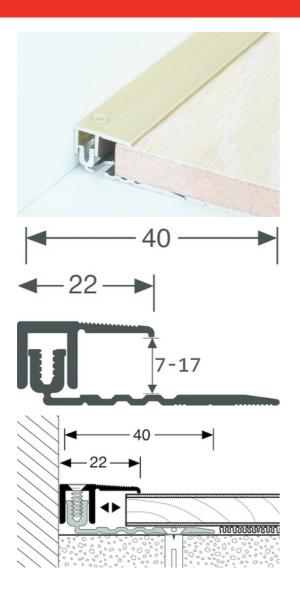

## **DESCRIPTION**

Drilled aluminium profile
For edging and finishing a floor covering
Drilled - countersunk: to be screwed
5 holes, first one at 65 mm.
Holes are drilled, countersunk and deburred
Supplied with screws and plugs

#### **USE**

For edging and finishing a floor covering Indoor use

## REFERENCE

Ref: 1294

## **MATERIAL**

REACH compliant

## **FITTING MODE**

Position the profile base, leaving an expansion gap. Locate the holes and drill into the concrete. Place the plugs, screw the base. Screw the cover onto the base to ensure a good connection.

## > MAINTENANCE

For daily cleaning, use standard detergents. In case you want to use a sodium, ammoniac or acid based cleaner, carry first out a preliminary test

The information contained in this document is provided for information purposes. Romus cannot be held liable for this information. The user or specifier will check the compatibility of the product technical data with the actual situation. Romus reserves the right to modify all or part of this document without prior notice.

Architect:

Project : Email :

Tel:

Distributor:

Tel: Email: