

Grey/Black



Grey/Dark grey



REFERENCES

- **18815**
QUICK STAR BLACK / GREY CUT TO LENGTH
- **8815**
QUICK STAR BLACK / GREY PER 2M X 20M ROLL
- **18816**
QUICK STAR GREY / ANTHRACITE CUT TO LENGTH
- **8816**
QUICK STAR GREY / ANTHRACITE 2M X 20M ROLL

WHAT ARE THE DIMENSIONS ?


QUICK STAR is in roll form and the stripe direction is in the same direction of the roll. The length is 20m and the height of the roll (width) is 2m. These dimensions can vary $\pm 0.5\%$. The weight per m^2 is 3.1kg (± 124 kg per roll). Every roll has a pole direction which is marked by arrows on the reverse side of the roll. The thickness is 13 mm.

WHAT IS IT MADE OF ?

QUICK STAR is made from a Polypropylene needle punch with a latex backing. Strips of Polyamide or nylon are inserted and each serves a different function. One strip is a "scraper", the other is softer and intended for "drying". These 2 strips alternate over the entire width of the roll. In Each roll 33 strips are inserted. If a roll begins with a scraping strip at one end of the roll, it will end with a scraping strip at the other and vice versa. During the production process, 2 rolls of 2m X 20m are manufactured (2 starting with the scraping strip and then 2 rolls starting with the drying strip). The reason for this is that when a mat exceeds the 2m width, the attached piece starts with the correct insert, maintaining the alternating pattern of drying and scraping.

HOW DOES IT WORK COMPARED WITH OTHER WALK OFF MATS ?

As you can see on the picture below, the mat has 3 different zones in one. The first zone is the Drying zone. This nylon or Polyamide insert will dry the soles of the shoes. The second zone is the collection zone. This zone will catch all the dirt in a lower area and prevent it from being transported again by someone else further in the building. Zone 3 will brush off all the dirt.

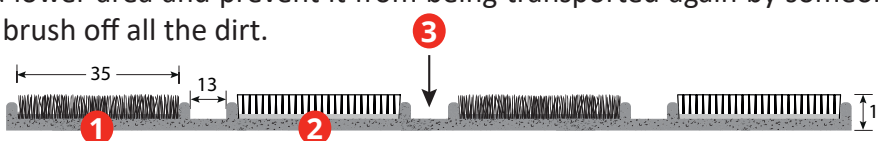

1 Polyamide scraping insert

2 Polyamide absorbent insert

3 Collecting zone

WHEN DOES IT NOT WORK AS WELL AS IT SHOULD ?

Tests conducted by a certified testing lab have shown that a total of 7m is required before feet are completely dry and clean by walking over the mat. This can be achieved with a combination of outdoor matting and indoor matting as realistically, not all buildings have the available space for one mat of this size. Consequently it is important that architects are aware of this fact when designing an area for an entrance mat.

THE TRUTH ABOUT DIRT

It can cost more than 500 € to remove 500g of dirt, after it has been tracked into a building.

- Up to 12kg of dirt can be tracked into a building by just 1000 people coming through an entrance each day over a 20 day work period.
- Without adequate matting, 42% of a floor's finish can be removed within the first 1.5m of an entrance after only 1,500 people have walked in.

RECOMMENDED INSTALLATION PROCEDURES

Placement on top of existing floor (loose lay)

If QUICK STAR is installed on top of an existing floor, it is recommended to insert the mat in a Ramp Profile Ref 2630 + Outer angles Ref 2633 or a Multi-Level Ref 1945 to avoid a tripping hazard. It is also recommended that mats measuring under 4m² (2m x 2m), not be loose lay as there is insufficient weight to exert pressure on the surface, resulting in the non-slip backing being ineffective.

Placement in a recess

If QUICK STAR is placed in a 10 to 12mm recess and incorporated in a matwell frame Ref. 6113 or in a self-adhesive matwell frame Ref 6290, it can be loose lay or bonded to the surface. Bonding is recommended to support rolling traffic over the mat. For gluing, Bison Textile Adhesive is recommended but any wall to wall carpet adhesive would be suitable.


The mat well should be level, free of dirt and impurities and be a minimum depth of 10 mm (measured from the level of the existing floor). If the mat well is any deeper, a non-elastic underlay must be inserted to reduce the depth to the suitable height of 10 to 11 mm. Doors must be checked for sufficient play in height otherwise movement of the door will cause damage to the mat.

Cut to size


If the mat well is complete, the mat can be cut to size in advance. However, experience tells us that mat wells are all too often not perfect rectangles so cutting the mat in advance does result in an imperfect fit. The mat can be cut to size with a Romus Orckal knife Ref. 91108 in the textile direction. The other direction should be cut by an angle grinder. Each aluminium bar has to be grinded separately over the whole length from the top down. Then in one solid move the angle grinder will cut the carpet passing the aluminium bars which are already cut.

Site and Screed Preparation prior to Mat installation


In order for a mat to be installed according to spec and to perform well beyond its intended life cycle, and to avoid bending of the aluminium bars it is imperative to take note of the following when preparing the site for installation :

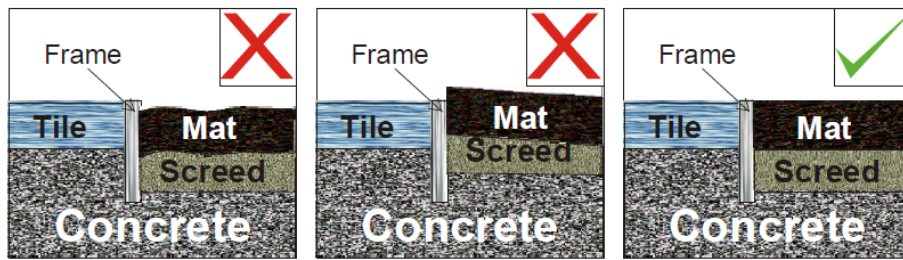


1. The depth of the recess should be within a tolerance of 1mm of the thickness of the mat to be installed.

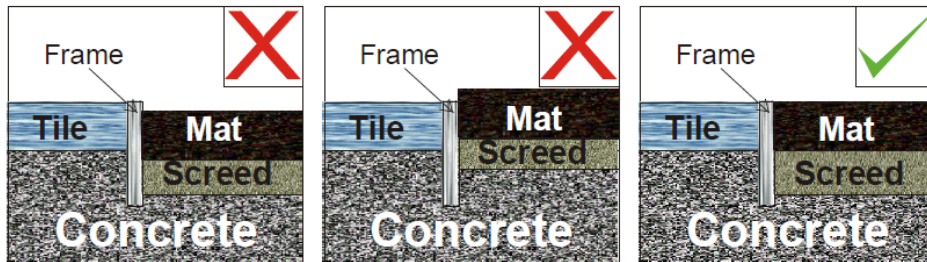

2. All debris needs to be removed from the screed prior to installation. Debris include tile cement and grout left behind by contractors, temporary fasteners used to anchor frames or other structures and any other object or material that would render the screed surface uneven or irregular.

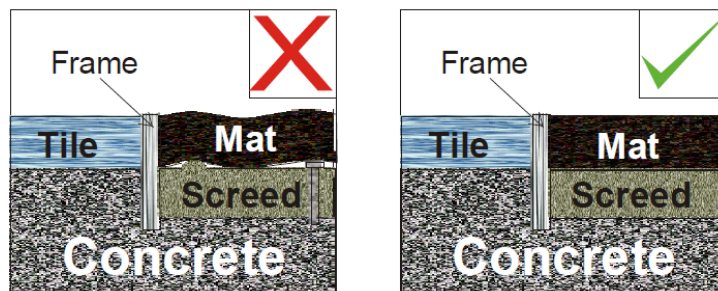

3. Where the screed meets the matwell/recess surrounding frame, the screed should be square to the perpendicular edge of the frame. Generally screeds tend to form a meniscus at the frame and thus the screed closest the frame is not within the 1mm spec.

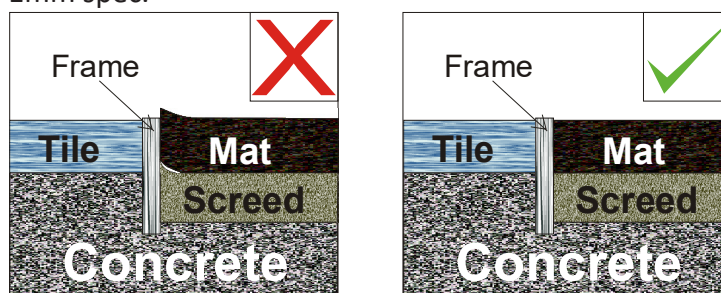


4. Mats cannot be installed in active entrances as the recess needs to remain clean in order for adhesives to bond properly. The unnecessary disturbance of the process of the mat installation could hinder the outcome of the quality of the installed mat. There are some steps that are very time frame specific such as the application of adhesives and the subsequent bonding of the mat to the screed. Any disruptions during these critical stages could be disastrous. Other stages are very sensitive to movement of the mat such as when marking and trimming a mat to fit a recess.

5. Did you know that recesses are generally not square or straight and even a deviation of 2mm could cause an unsightly gap between the mat and the recess frame. On a mat that is 10 meters long this amounts to a tolerance of only 0.02%.

6. Mats cannot be installed over wet or uncured screeds due to the presence of excessive moisture that would render the bonding agents ineffective.

Great screeds make great mats

HOW TO INSTALL IN A RECESS

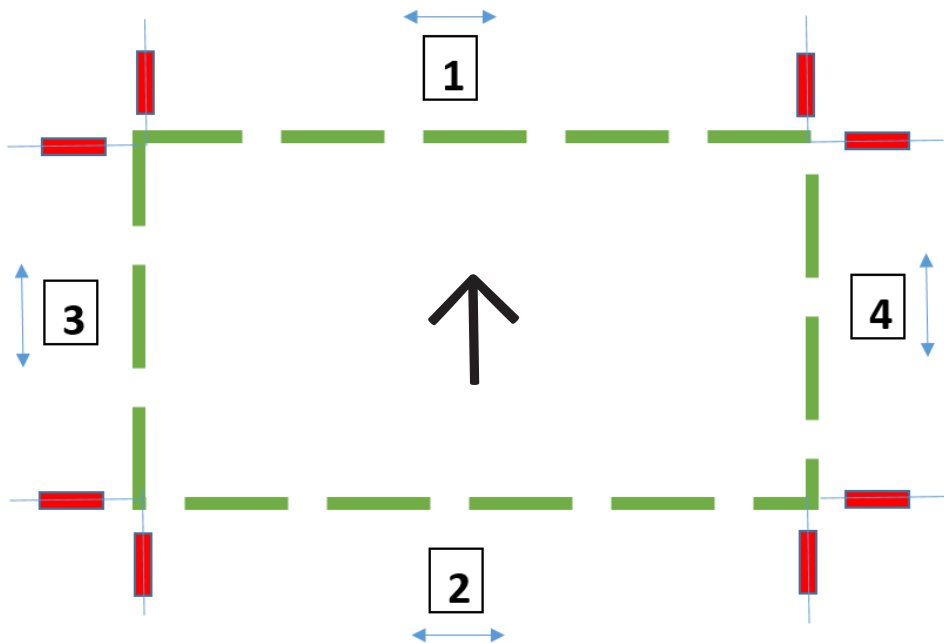

Necessary tools : 1 straight edge that does not bend and maximum 10 mm thickness, Romus Orckal knife Ref 91108, **paper tape**, wooden cutting board for protecting the floor against cutting marks and a pencil. Make sure you have your health and safety file and that the area where you will be working is cordoned off and in rule with the safety specifications.

Here above you will see a recess of 100 cm X 200 cm portrait orientation. The walking direction will be in the length of the 100 cm.

Step 1 : You cut the mat 110 cm X 205 cm from the roll to cut it afterwards to size.

Step 2 : You put a paper tape on top of the existing floor in all 4 corners vertically and horizontally (**red blocks on the drawing is the tape**).

Step 3 : You take a straight edge and put it in the length of every profile of the recess. Then you mark this line on top of the tape. You have now an extension of the recess lines.

Step 4 : You take the mat and you put it over the recess and then you can see the extended lines on top of the tape outside the mat. First you look for the best solution so that the lines of the carpet are exactly divided top and bottom inside the recess lines.

Step 5 : Put a piece of paper tape on top of the mat at position 1 at the drawing making sure that the line on top of the floor can be projected on this tape. Take the straight edge and align it with both markings on the floor end then mark the tape on top of the carpet with a pencil.

Step 6 : Then you move the mat a little bit away from the recess so you have a solid floor where you can put the cutting board on. Then you put the mat on top of the cutting board and align the straight edge with the lines on top of the tape on top of the mat and you cut. TIP: Sit with your knees on top of the straight edge so that it cannot move under any circumstance. Also cut the mat in several movements. Do not try to cut through the mat in one time.

Step 7 : Repeat step 5 and 6 but at position 2. The only difference here is that instead of aligning the straight edge with the lines on top of the mat, you move 5 mm away from the lines towards the inside of the mat. This will give your 5 mm space between the mat and the inside of the recess because the mat can expand and also then something could be put in between the recess and the mat to get it out for extensive cleaning only. Also only possible if the mat is not glued in.

Step 8 : repeat step 5 and 6 for position 3

Step 9 : repeat step 7 for position 4

Gluing the mat inside the recess.

For gluing the mat inside a recess the screed needs to be well prepared like explained in the product specs. Also it needs to be free of dust and therefore I recommend vacuum cleaning. Using a brush will not be enough. The following safety measures have to be taken: Wear protective gloves and wear the right protection not to inhale the fumes of the glue. Also make sure no work is being performed where the glue could ignite due to sparks or open fires. Therefore works like welding, grinding or smoking are not allowed near the installation site. The glue used is a super contact glue (Adtech S 11) and 1 litre can cover +/- 3 m² (0.5 litre on the recess and 0.5 litre on the mat). The tools you need for gluing are an empty 5 litre container where the side is cut open to contain the glue and a left over piece of carpet which will act like a brush to apply the glue. Also a rubber hammer or a heavy roller to apply pressure after the gluing on top of the mat. First you glue the recess allowing it to dry for about 20 minutes in a temperature of at least 20 degrees. If the temperature is lower the drying time will be longer. Then the glue has to be applied to the bottom of the mat. Also there the drying time has to be respected of +/- 20 minutes. Put the mat in such a position that it can be for installing easily tipped over into the recess because one applied pressure between the recess and the mat, moving the mat is impossible. Once in position you can hammer the mat onto the floor or use the heavy roller. This procedure is only applicable for smaller mats.

For bigger mats following procedure should be followed : Put the mat into the recess into its perfect position. On one side an installer will have to sit on top of the mat. Then the mat is flipped over towards the installer sitting on the mat and he will hold back the mat. Another installer will then glue the recess and mat for +/- 20 to 50 cm and after the drying time the mat will be released and hammered down. Once there is good contact the mat can be flipped over to the already attached side and then the rest of the mat and recess can be glued. After the drying time the mat can be flipped back and everything will be then hammered into position.

Use and Care of ROMUS QUICK STAR Entrance Matting





- Mat should be vacuumed weekly and in high traffic areas more frequently. Should a claim be lodged and dirt makes up more than 10% of the weight per m², the warranty is null and void.
- Pedestrian traffic of 500 people per day
- Trolley traffic : 100 kg max/wheel
- Water absorption according to ISO 9073-6 (2000) : 4.3 L / m²
Mass (g) before = 43,7 g, Mass (g) after 86,5 g, water absorption 98%

WHAT ABOUT CE DECLARATION ?



DECLARATION OF PERFORMANCE
No. DOP-CPR-«1.009»

1. Unique identification code of the product-type or product family :
«048 013 008 500 - QUICK STAR - 200 cm x 20 m».
2. Type, batch or serial number or any other element allowing identification of the construction product :
Entrance Matting.
3. Intended uses of the construction product, in accordance with the applicable harmonised technical specification, as foreseen by the manufacturer: Use as entrance floor covering(s) within a building according to the manufacturer's specifications and installation practices in accordance with EN 14041.
4. Name, registered trade name or registered trade mark and contact address :
ROMUS SAS 13, 15 rue de Taillefer, 91150 Champlan.
5. Where applicable, name and contact address of the authorised representative (distributor, importer).
6. System of assessment and verification of constancy of performance of the construction product :
AVCP «system 4».
7. In case of the declaration of performance concerning a construction product covered by a harmonised standard : «system 4» Not applicable.
8. In case of the declaration of performance concerning a construction product for which a European Technical Assessment has been issued : not applicable.
9. Declared performance :

| Essential characteristic | Performance | Harmonised technical specification | Essential characteristic | Performance | Harmonised technical specification |
|--|---|------------------------------------|--|----------------|------------------------------------|
| Reaction to fire EN 13501-1 |  | EN 14041:2004 AC:2006 | Electrical behaviour (dissipative) «EN 1081» or «ISO 10965» | Not applicable | EN 14041:2004 AC:2006 |
| Content of pentachlorophenol EN 12673 |  | | Electrical behaviour (conductive) «EN 1081» or «ISO 10965» | Not applicable | |
| Formaldehyde emissions «ENV 717-1» or «EN 717-2» |  | | Thermal conductivity «EN 12524» or «EN 12667» | Not applicable | |
| Slip resistance «EN 13893» |  | | Water-tightness «EN 13553» | Not applicable | |
| Electrical behaviour (antistatic) «EN 1815» or «ISO 6356» | Not applicable | | | | |

10. The performance of the product identified in points 1 and 2 is in conformity with the declared performance in point 9. This declaration of performance is issued under the sole responsibility of the manufacturer identified in point 4.

Signed for and on behalf of the manufacturer by :

ROMUS

01/09/2013

WHAT ABOUT CLEANING PROCEDURES ?

The care and maintenance of QUICK STAR is essential to maintain the durability and appearance of the mat. Soiling and general wear has a negative impact on the appearance of the entrance mat and should be prevented by instituting an effective cleaning program. A regular cleaning program prevents premature replacement of the entrance mat. Installation of an exterior mat such as Super Scraper will reduce the soiling of the QUICK STAR. Avoid excessive use of cleaning products. If they are used then ensure they are washed out of the mat thoroughly as any residue can attract dirt.

Vacuuming :

Regular vacuuming with a sufficiently powerful vacuum cleaner and brush is essential to maintain the condition of the mat. Heavy traffic areas should be vacuumed more intensively than lighter traffic areas.

Stain removal :

Stains should be removed immediately (before it dries) with a neutral stain remover. Chewing gum can be removed with ice by turning the gum to a solid and then removing it with a knife or scraper.

Extreme pollution :

high pressure cleaning is possible but be careful with the amount of pressure and use always cold water. No steam. I have done it with a 3 year old mat full of green moss and the mat came out as new.

WHAT ABOUT TESTS AND CERTIFICATES ?

Certificates are available on request : Fire classification to European standards, Anti-slip certificate, Reach compliant certificate which includes the VOC, wheelchair compliant, etc. We work with Centexbel in Ghent (associated with the Textile University of Ghent) which is fully licensed to carry out testing and produce certificates, so please do not hesitate to contact us.

WHAT CAN GO WRONG ?

Over the years ROMUS has worked with a number of distributors and customers and has valued experience of installations and the various obstacles and issues that arise. Below please find some typical examples and their relevant solutions :

When I put 2 pieces together in the same installation, the colour is different between the 2 pieces.

The reason for this is that one of the pieces has been turned around 180 degrees. It is important that the arrows on the backing are matched for both pieces in the same direction, which will ensure a colour match.

The mat does not want to lie flat.

In a mat well : the reason for this could be that the mat was cut exactly to size and a few hours later it has expanded. Solution: cut 5mm off the length of mat. This should be done prior to installation so that a re-visit to the customer is not required.

Loose lay : In colder conditions the mat will try to revert to its original form, namely rolled up. The solution for this is to “break” the mat. This means that you counter roll the mat in the opposite direction for the required result. The mat will should settle into a flat position within 24 hours if the temperature conditions are above 20 degrees Celsius.

I have a piece that is damaged on the mat, what now ?

It is possible to cut the damaged piece out and to replace it with a new piece but, depending on the age of the mat, there could be a colour variation between the old and new material.

I have an install where the dimension of the recess is exceeding the 2 meters front to back, what should I watch out for ?

The width of each roll is 2m wide but the outer edges of each side are similar. This means that by placing another piece next to the first piece, you will have 2 identical inserts next to each other. Then the pattern of alternating drying and brushing is not respected. To resolve this issue, the first strip of the second piece has to be trimmed with a Romus Orckal knife Ref 91108 knife so that the alternating pattern is respected. ROMUS always produces 2 rolls where the horizontal cut is brushing strips and 2 rolls where the cut is drying strips. Depending on the amount of rolls ordered, it maybe not necessary to trim 1 strip off to combine 2 different rolls.

The information contained in this document is provided for information purposes. Romus cannot be held liable for this information. The user or specifier will check the compatibility of the product technical data with the actual situation. Romus reserves the right to modify all or part of this document without prior notice.

Architect :

Phone :

Email :

Project :

Distributor :

Phone :

Email :