


## DATA SHEET

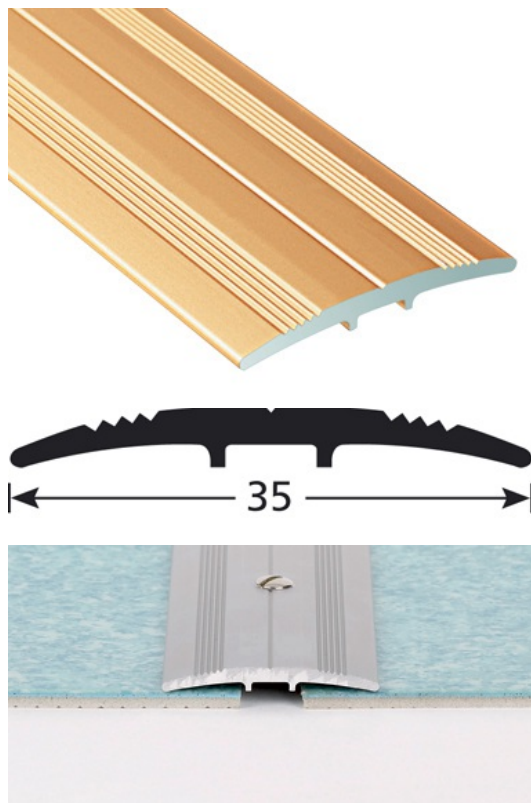

### DESCRIPTION

Drilled aluminium profile  
to make a transition between 2 floor coverings of the same level  
To be screwed - central holes  
18 holes, first and last one at 83 mm  
Holes are drilled, countersunk and deburred

### USE

For overlapping a floor covering or a parquet or concrete floor.  
Indoor use

### REFERENCE

Ref : 1566

### MATERIAL

REACH compliant

### FITTING MODE

Cut the profile to the desired length. Locate the holes and drill into the concrete. Place the ROMUS plugs 94154. Position the profile and fasten with screws 94136. Make the aluminium profile free of grease, by using isopropyl alcohol. Remove the silicone-coated backing paper and fix the anti-slip insert. Press with roller 95137.

### > MAINTENANCE

For daily cleaning, use standard detergents. In case you want to use a sodium, ammoniac or acid based cleaner, carry first out a preliminary test.

The information contained in this document is provided for information purposes. Romus cannot be held liable for this information. The user or specifier will check the compatibility of the product technical data with the actual situation. Romus reserves the right to modify all or part of this document without prior notice.

Architect :

Project :

Email :

Tel :

Distributor :

Tel :

Email :