
- **► COVERSTRIPS EXPANSION PROFILES**
- > "PPS" PROFILES
- ► «PPS» TRANSITION PROFILE REF. 1257

DATA SHEET

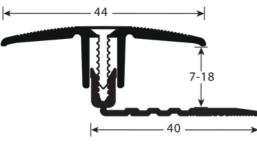





DESCRIPTION

Drilled aluminium profile

to make a transition between 2 floor coverings of the same level

Drilled - countersunk: to be screwed

5 holes, first one at 65 mm.

Holes are drilled, countersunk and deburred

Supplied with screws and plugs

USE

For overlapping a floor covering or a parquet or concrete floor. Indoor use

REFERENCE

Ref: 1257

MATERIAL

REACH compliant

FITTING MODE

Position the profile base, leaving an expansion gap. Locate the holes and drill into the concrete. Place the plugs, screw the base. Screw the cover onto the base to ensure a good connection.

> MAINTENANCE

For daily cleaning, use standard detergents. In case you want to use a sodium, ammoniac or acid based cleaner, carry first out a preliminary test.

The information contained in this document is provided for information purposes. Romus cannot be held liable for this information. The user or specifier will check the compatibility of the product technical data with the actual situation. Romus reserves the right to modify all or part of this document without prior notice.

Architect:

Project:

Email : Tel :

Distributor: Tel: Email: